



Washing

- 1 Do not over load the machine,** this will result in a poor wash.
- 2 Select the correct program** on the touch pad.
- 3 Select the correct wash program** for the load type and temperature required.
- 4 Start the washing machine.**

After Washing

- 1 Place items into dryer** and select the correct drying temperature and time.
- 2 After drying, remove items** from the dryer and iron garments while they are slightly damp.
- 3 Put washed laundry** in a clean dry place.
- 4 Keep the machine doors** slightly open and keep drums clean.

How to replace a container:

- 1 To replace the Vital laundry products,** check the remaining level of product in the container.
- 2 If the product is empty,** it needs to be replaced with a new container of the same product.
- 3 Use the PPE specified by your employer** and refer to the MSDS sheets of the product.
- 4 Set a new full replacement** of the product in place next to the empty container.
- 5 Loosen cap** on full container.
- 6 Remove the cap and tube** from old container.
- 7 Transfer cap and tube** to the new full container.
- 8 Never mix or add water** to any of our products.
- 9 Clean any spills** immediately and rinse with water.
- 10 Wash and dry** hand thoroughly after changing container.

A32.727
Vital
Premium Detergent
10ltr



A32.728
Vital
Encapsulated Softener
10ltr



A32.728
Vital Low Temperature Destainer
10ltr

